Driver Installation

(For all Tecella products, except for the Pico)

Document Revision 1.1 December 23, 2020

Tecella

97 Chaumont Cir

Foothill Ranch, CA 92610, USA

www.tecella.com

info@tecella.com

+1-714-641-1709

+1-714-641-1569 Fax


1. Download and run the driver installer

For 64-bit systems:


http://downloads.tecella.com/driver/Driver 64bit 4.5.6.exe

For 32-bit systems:


http://downloads.tecella.com/driver/Driver 32bit 4.5.6.exe

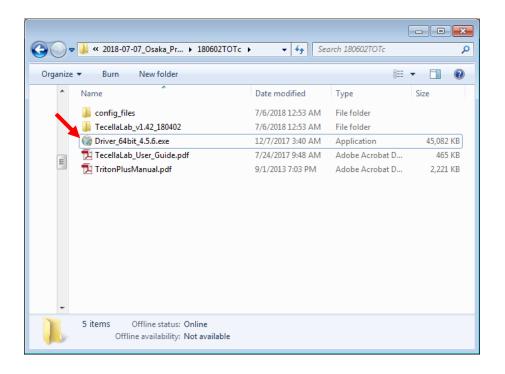


2. Click on "Next"

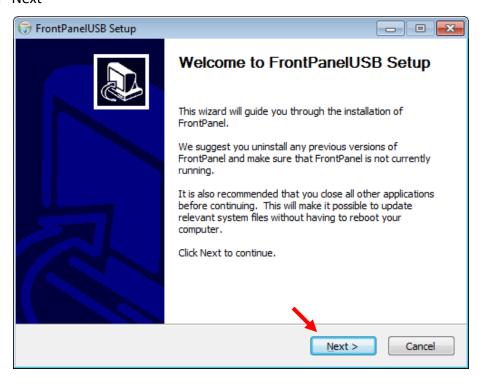


3. Click on "I Agree"

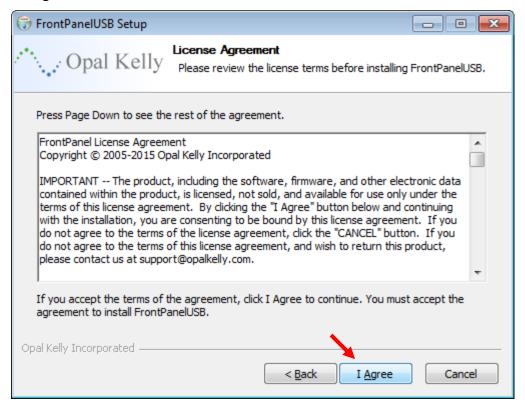

4. Uncheck everything except "FrontPanel USB Driver". "FrontPanel USB Driver" is checked by default, and cannot be unchecked.

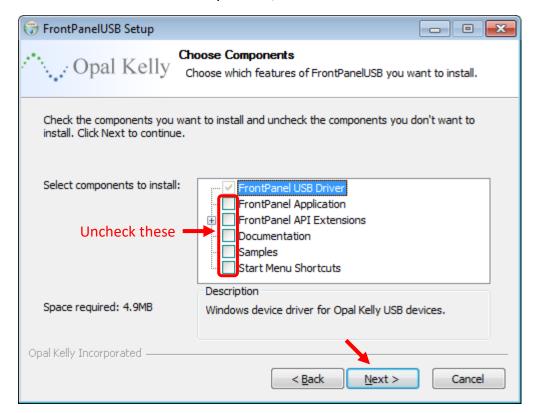

5. Click on "Install"

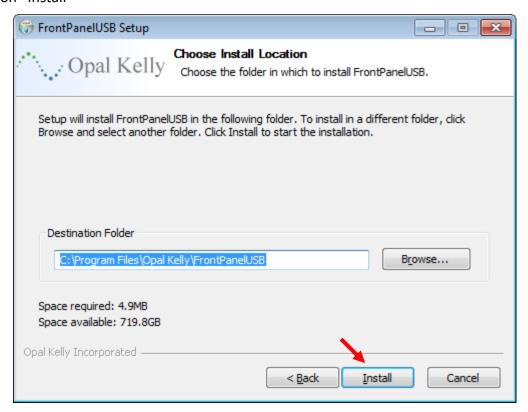

6. Click on "Finish" to complete driver installation

